



IRIDIUM 9575 : OVERVIEW

Your Iridium Extreme is equipped with a dedicated SOS button which you may use to obtain emergency assistance anywhere in the world through Travel Safety Group Limited (GEOS).

Registration is required online at:
geosalliance.com/iridium

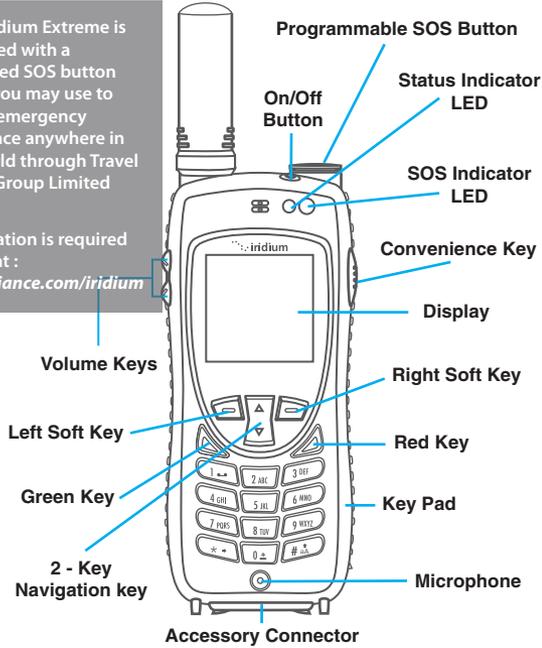

IRIDIUM 9555 : OVERVIEW

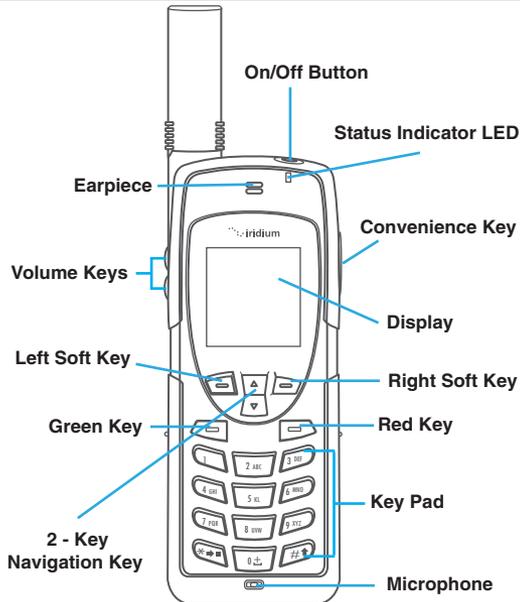

TO ACTIVATE YOUR SIM CARD

Call us at
1.941.955.1020

- or -

email us at

activations@satellitephonestore.com

4 LOCATIONS WORLDWIDE

Satellite Phone Store Alaska

1231 West Northern Lights Blvd, Ste.202
Anchorage, AK 99503

Satellite Phone Store California

2830 Shelter Island Dr.
San Diego, CA 92106

Satellite Phone Store Ensenada

Calle Riveroll #885
Local C Zona Centro, Ensenada B.C.

Satellite Phone Store Florida

1414 S Tamiami Trail
Sarasota, FL 34239



Iridium 9575 & Iridium 9555

HOW TO USE YOUR SATELLITE PHONE

QUICK GUIDE


Your Satellite Phone Number

Thank you for choosing
SatellitePhoneStore!

▶ GETTING STARTED

1. Go outside to an area that has a full view of the sky.

NO TREES OR BUILDINGS OBSTRUCTING THE VIEW.

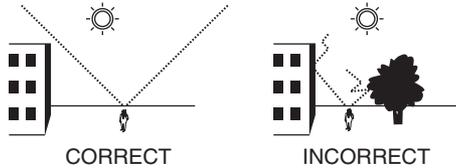

2. Fully extend the antenna on the phone. Press and hold down the power button on top until the phone turns on.

3. The phone will search for a signal. Once the screen displays "**Registered**" you are ready to make and receive calls.

**You MUST make a test call
before leaving for your trip!**

Free test number : 0014807525105

▶ CALLING FROM YOUR SATELLITE PHONE

To call a landline or cell phone :

Dial 00 > country code > area code > phone number

For example : 0019419551020

(USA/Canada country code is 1 - Do not include dashes or spaces)

To call a satellite phone to a satellite phone :

Dial 00 > satellite phone number

For example : 00870712345678

(Do not include dashes or spaces)

▶ CALLING TO A SATELLITE PHONE

To call the satellite phone directly from a landline/cell phone :

Dial 011 > Satellite phone number

For example : 011870712345678

(USA / Canada based callers - Do not include dashes or spaces)

For international callers :

Dial 00 > satellite phone number

For example : 00870712345678

(Do not include dashes or spaces)

To use 2-stage dialing (post-paid plans only) :

1. Dial 480-768-2500
2. Wait for the voice prompt, then enter the 12-digit satellite number
3. The system will then re-route the call for you.

▶ SETTING UP VOICEMAIL

Select "**Menu**" > "**VoiceMail**" > "**Call VoiceMail**" (this will automatically call the Iridium voicemail number, +881662990000).

- Wait for the voice prompt asking you to "re-enter the Iridium phone number you are trying reach". Enter your Iridium phone number (8816XXXXXXX). You will then be forwarded to your personal voicemail greeting.
- Press the * key to interrupt the greeting, and enter your password (last 7 digits of your Iridium number, see below) to access your personal mailbox.
- Follow the voice prompts for menu options.

By default, your voicemail password is the last 7 digits of your Iridium phone number. For security reasons, please change it using menu options.

▶ CHECKING VOICEMAIL

1. Select "**Menu**" > "**VoiceMail**" > "**Call VoiceMail**" through the phone's onscreen menu.
2. Enter your 12-digit satellite phone number when prompted.
3. When you hear the greeting, "You have reached mailbox....", interrupt this by pressing the star key (*).
4. Enter your voicemail password. The default password is the last 7 digits of your phone number.

▶ TEXT MESSAGING ON THE SATELLITE PHONE

Sending a text to a cell phone :

1. Select "**Menu**" > "**Messages**" > "**Create Message**".
2. Type your 160-character message.
3. To send the text select "**Options**" > "**Send**" > "**Add**".
4. Select a stored phonebook number or enter a new number.

You must be outside and "registered" to send and receive messages .

Sending a text to an email address :

1. Compose your text starting with the email address you wish to send it to, i.e.: "email@domain.com having a great time!"
2. When you select "**Send**" and it prompts you for a destination number, enter 00*2 then press the OK key.
3. If the phone successfully sends the message it will display "**Message Sent**"

Receiving an SMS message on your Iridium satellite phone is free. Replying to that message will be charged at your normal SMS rate.

▶ SENDING A TEXT MESSAGE TO A SATELLITE PHONE

Using the online messaging portal :

1. Go to <http://messaging.iridium.com/>
2. Enter the satellite number into the "To" field
3. Enter a Reply Email so the replies come to your email inbox
4. Enter your text in the message field and click "Send Message"

Sending a text from an email :

Send an email to : 8816____@msg.iridium.com
(i.e. 881612345678@msg.iridium.com)

Remember to keep your character count below 160 characters.