

# Iridium 9505A Quick Guide

## **Getting Started**

- 1. Go outside to an area with a clear view of the sky. No trees or buildings obstructing your line of sight.
- 2. Fully extend the antenna upwards.
- 3. To turn on your phone, press and hold down the power button, located below the keypad, until the light on the screen turns on. The screen will display a short animated sequence that reminds you to rotate and extend the antenna, and shows how to hold the phone for the best reception.
- 4. The phone will search for a signal. It may take a few minutes. Once the screen says "Registered" you're ready to make & receive calls.

\*\*\* IMPORTANT : To confirm that the phone works properly, you must make a free test call to 00 1 480 752 5105 \*\*\*

## Calling From the Satellite Phone

• To call a landline/cell phone, dial : **00 > Country Code > Area Code > Phone Number**For example : 00 1 941 955 1020 (Do not include dashes or spaces)

### Calling To the Satellite Phone

• To call the sat phone directly from a landline/cell phone, dial: **00 > Satellite Phone Number**For example: 011 8816 1234 5678 (non US/Canada-based phones should use the international dialing prefix 00 instead of 011)

\*\*\*Calling a sat phone directly is free for the sat phone user but VERY expensive for the caller, who may be billed up to \$12/min.

• To call the sat phone using the 2-Stage service, dial: 1 (480) 768-2500, wait for the voice prompt, enter the 12-digit satellite phone number. The system will connect the call for you.

\*\*\*Using the 2-stage service, the caller will only be charged for a standard US call and the minutes will be debited from the sat phone's plan.

#### Checking Voicemail

- 1. Press the Envelope key that is located under the Red C key and press OK. When prompted, enter your 12 digit satellite phone number.
- 2. When you hear the greeting, "You have reached mailbox...", interrupt this by pressing the star key (\*).
- 3. Then enter your voicemail password, which is the last 7 digits of your satellite phone number. \*DO NOT CHANGE THIS PASSWORD\*
- 4. Press 1 to listen to your messages.

#### Sending a Text Message From the Satellite Phone

## Creating a text message

- 1. Press the "Message" icon that looks like an envelope. That will directly go to the Messages menu. Scroll to get to the "Message Editor" and then press "OK" to select.
- 2. The cursor is placed in the upper left corner of the editing area. If they're previous messages, the message editor displays the contents of the last message entered.
- 3. Press and hold the "C" button to clear the entire message editor content, if necessary. Begin composing your message. Enter a letter by pressing a key as many times as necessary to chose the letters.

# Sending a Text to an Email Address

1. Follow the same steps as "Creating Messages". Compose your message, starting with the destination email address, followed by a space, and then your message. For example: johndoe@domain.com. The maximum length of the entire message is 160.

# Sending a Text Message to the Satellite Phone

- 1. Select "Menu" > "Messages" > "Create Message". Type your message. Maximum of 160 characters
- 2. Select "Options" > "Send" > "Add". You can select a contact saved from your phone or select "Enter Number" to enter a phone number. Enter cell phone number. Country code first. Then tap Ok, highlight the number, and tap "Send"
- 3. Make sure you are at a clear view of the sky to process. Wait until "SMS Message Sent Ok" appears on display.

Order #

Please pull gently upwards.

Antennas are fragile.



Thank you for choosing SatellitePhoneStore.com!

Power button

+1.941.955.1020 Call us at

Satellite PhoneStore.com

or Email us at

Activations@SatellitePhoneStore.com

To Activate Your SIM Card

# WIS

Your satellite phone #

Iridium 9505A **Quick Guide** 

Satellite antenna lock release button Satellite antenna Display and status indicators Real-time Signal strength clock indicator Battery charge indicator Earpiece Display Volume control IRIDIU Keys Scroll IRIDIUM bar Message key OK MENU 3 DEF 2 ABC Alphanumeric **4** GHI 6 MNO 5 JKL 7PQRS 9wxyz 8 TUV 0 + Quick access key

Microphone