



Peplink MAX User Manual

MAX Dome Pro LR

Panel Appearance

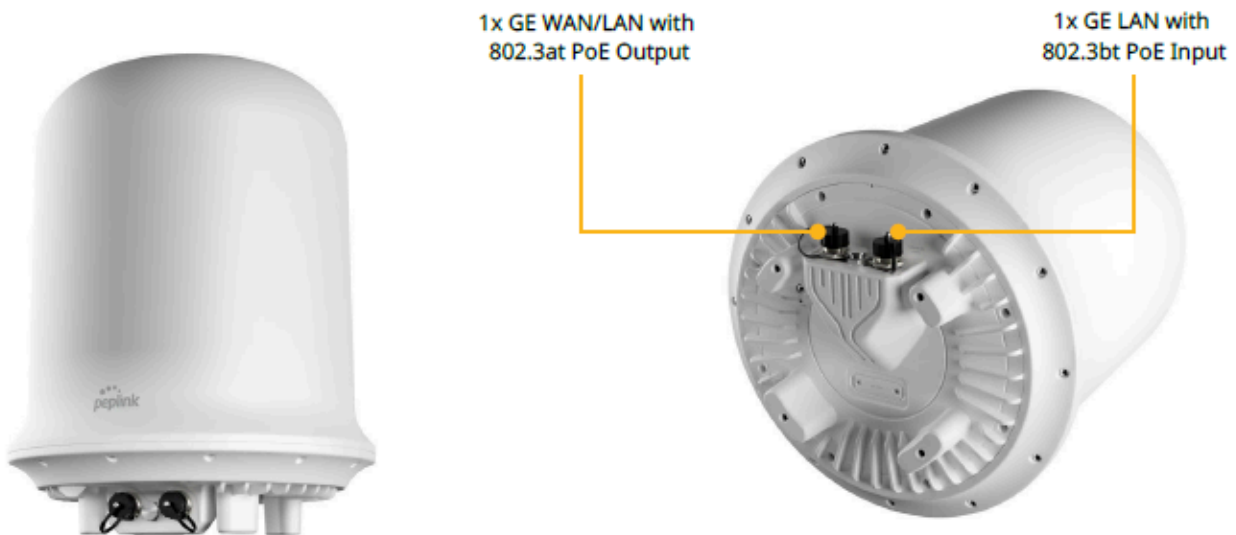

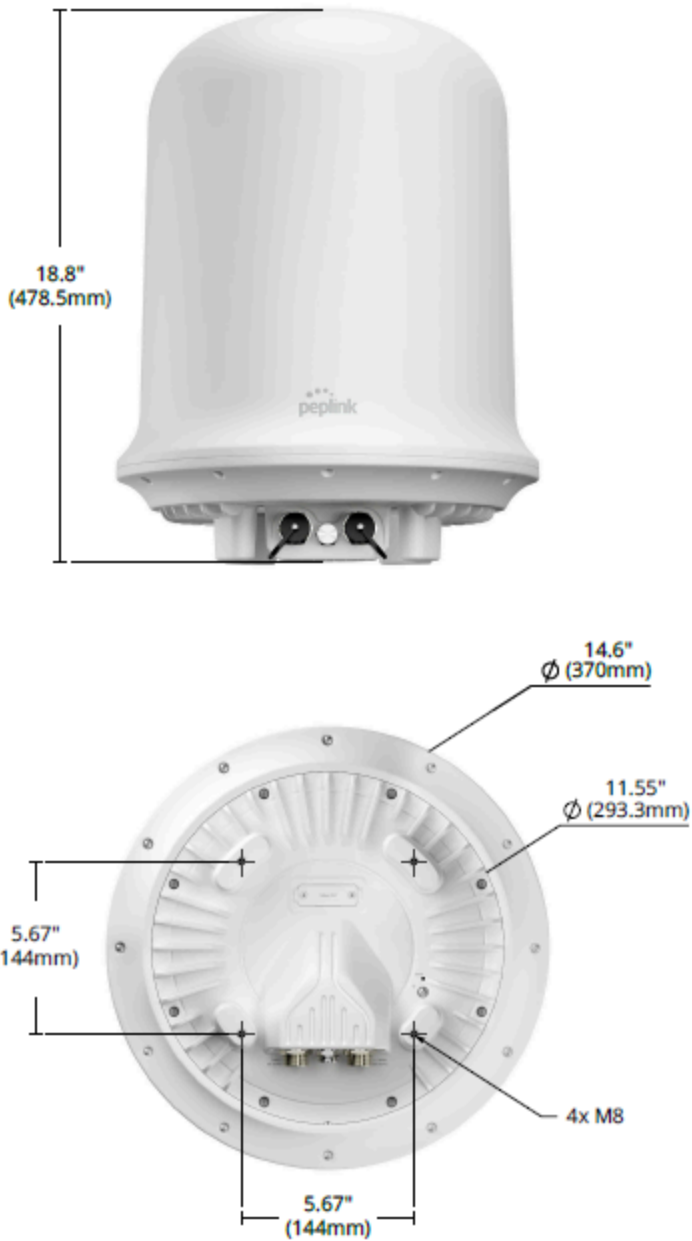

The statuses indicated by the front panel LEDs are as follows:

Status Indicators

Status	OFF	System initializing/power off
	Red	Booting up or busy
	Blinking red	Boot up error
	Green	Ready

© 2022 Peplink | Pepwave. All Rights Reserved.